

Technical Data Sheet

Pressure / Temperature / Humidity / Air Velocity / Airflow / Sound level

Hotwire thermo-anemometer **VT 110 - VT 115**

KEY POINTS

- Easy to use

- Hold-min-max functions

- Adjustable backlight

- Selection of units

- Automatic average

- Debit calculation

TECHNICALS FEATURES

Measuring element	Hotwire air velocity: thermistance with a negative temperature coefficient. Ambient temperature: NTC sensor		
Display	4 lines, LCD technology. Sizes 50 x 36 mm. 2 lines of 5 digits with 7 segments (value) 2 lines de 5 digits with 16 segments (unit)		
Probes	VT 110 : Stainless hotwire probe VT 115 : Telescopic hotwire probe bent at 90°		
Cable	Straight, lenght : 2 m		
Housing	ABS, protection IP54		
Keypad	5 keys		
Conformity	Directives CEM 2004/108/CE and NF EN 61010-1		
Power supply	4 batteries AAA LR03 1.5 V		
Battery life	180 hours		
Ambience	Neutral gas		
Operating temperature (instrument)	From 0 to +50 °C		
Operating temperature (probe)	From 0 to +50 °C		
Storage temperature	From -20 to +80 °C		
Auto shut-off	Adjustable from 0 to 120 min		
Weight 250 g			

SPECIFICATIONS


Measuring units	Measuring range	Accuracy ¹	Resolution
Velocity (hotwire)			
m/s, fpm, km/h	From 0.15 to 30 m/s	From 0.15 to 3 m/s : \pm 3% of reading \pm 0.05 m/s From 3.1 to 30 m/s : \pm 3% of reading \pm 0.2 m/s	0.01 m/s 0.1 m/s
Airflow			
m³/h, cfm, l/s, m³/s	From 0 to 99 999 m³/h	±3% of reading ±0.03 x area (cm²)	1 m³/h
Temperature			
°C, °F	From -20 to +80 °C	± 0.3% of reading ± 0.25 °C	0.1 °C



FUNCTIONS

- Airflow calculation
- · Airflow calculation with cone
- Selection of units (air velocity, airflow and temperature)
- Hold function
- Display of minimum and maximum values
- Adjustable auto shut-off
- Backlight
- Airflow detection
- Selection of cone
- Dimensions of rectangular and circular duct
- Automatic average
- Air velocity compensation in atmospheric pressure


Etablies dans des conditions de laboratoire, les exactitudes présentées dans ce document seront maintenues sous réserve d'appliquer les compensations nécessaires ou de

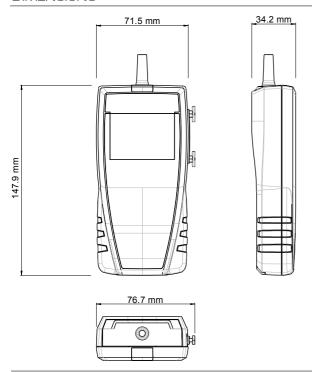

OPERATING PRINCIPLES

Hotwire anemometer

A wire is continuously heated at a superior temperature than ambient and continuously cooled by airflow. Constant temperature is maintained by a regulation circuit. The heating current is proportional to the airflow velocity.

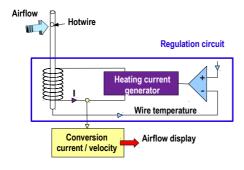

Thermometer: CTN probe

Probes with a negative temperature coefficient are thermistors with a resistance that decreases with the temperature, according to the equation below:

$$R_{(T)} = R_{(T0)}e^{-(\frac{\alpha}{100} \times (T_0 + 273.15)^2 \times (\frac{1}{T + 273.5} - \frac{1}{T_0 + 273.5}))}$$

RT= resistance sensor value at temperature T

 $R(T_0)$ = valeur de la résistance du capteur de température at reference T_0

T and T₀ in °C

 α and T₀ sensor specific constants

SUPPLIED WITH

Instruments are supplied with:

- VT 110 : Straight hotwire probe
- VT 115 : Telescopic hotwire probe bent at 90°
- Calibration certificate
- Transport case (ref : ST 110)



ACCESSORIES

CQ 15 : Magnetic protective housing



K 35 – 75 – 120 – 150 : Airflow cone



MT 51 : ABS transport case



MAINTENANCE

We carry out calibration, adjustment and maintenance of your instruments to guarantee a constant level of quality of your measurements. As part of Quality Assurance Standards, we recommend you to carry out a yearly checking.

GUARANTEE

Instruments have 1-year guarantee for any manufacturing defect (return to our After-Sales Service required for appraisal).

Distributed by:

e-mail: export@kimo.fr